




2020 Ram 2500 6.4L Tip Kit

P/N 77072597AA / 77072598AA

www.mopar.com

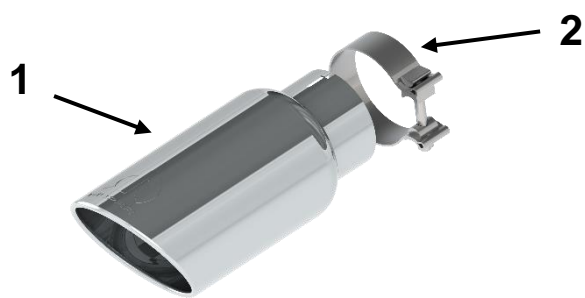

Call Out	Description	Quantity
1	Tip (77072597AA - Chrome, 77072598AA – Black)	1
2	Clamp	1

NOTE: CAUTION! Never work on a hot exhaust system. Always wear eye protection when working under any vehicle.

NOTE: Torque all fasteners according to manufacturer's values.

Suggested Tools for Installation:		
(1) Standard 3/8" Ratchet	(1) Standard 3/8" x 6" Extension	(1) Torque Wrench
(1) Reciprocating saw	(1) Deburring tool / File	(1) Deep 3/8" x 15mm Socket
		(1) Tape Measure

1. Cut 7.25" from the furthest end of the tailpipe. Deburr cut as needed. (Figure 1)



Figure 1

2. Place the clamp (included) over the expanded and notched end of the tip and slide the tip over the tailpipe into approximate position. Snug the clamp while holding the tip, or it may fall. Align the tip with the side of the vehicle, 1" inward from the outermost part of the vehicle. Tighten clamp to 43-47 N-m (32-35 ft-lbs). (Figure 2)

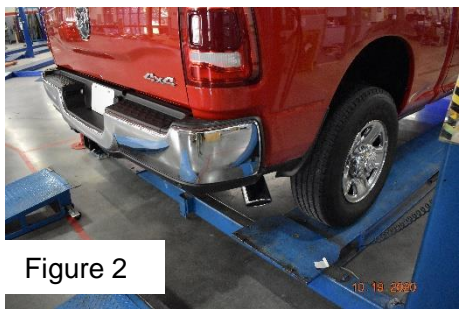


Figure 2