

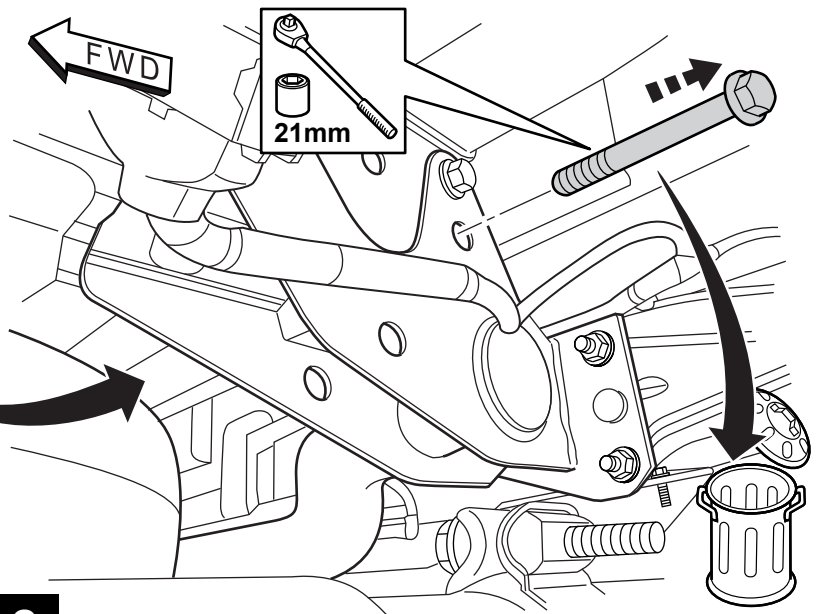
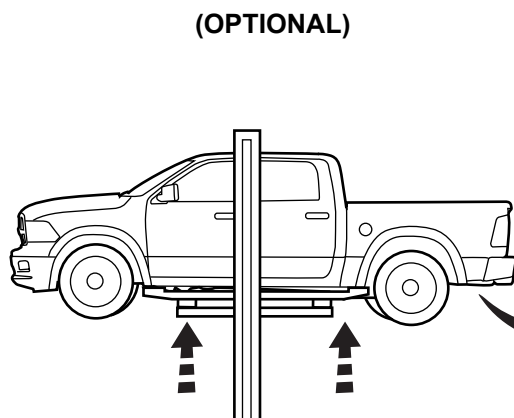
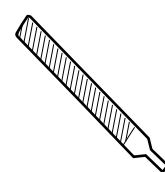
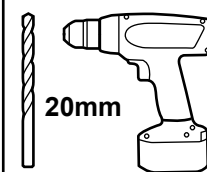


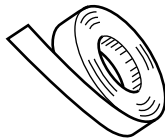

MFTG BED STEP RAM



www.mopar.com

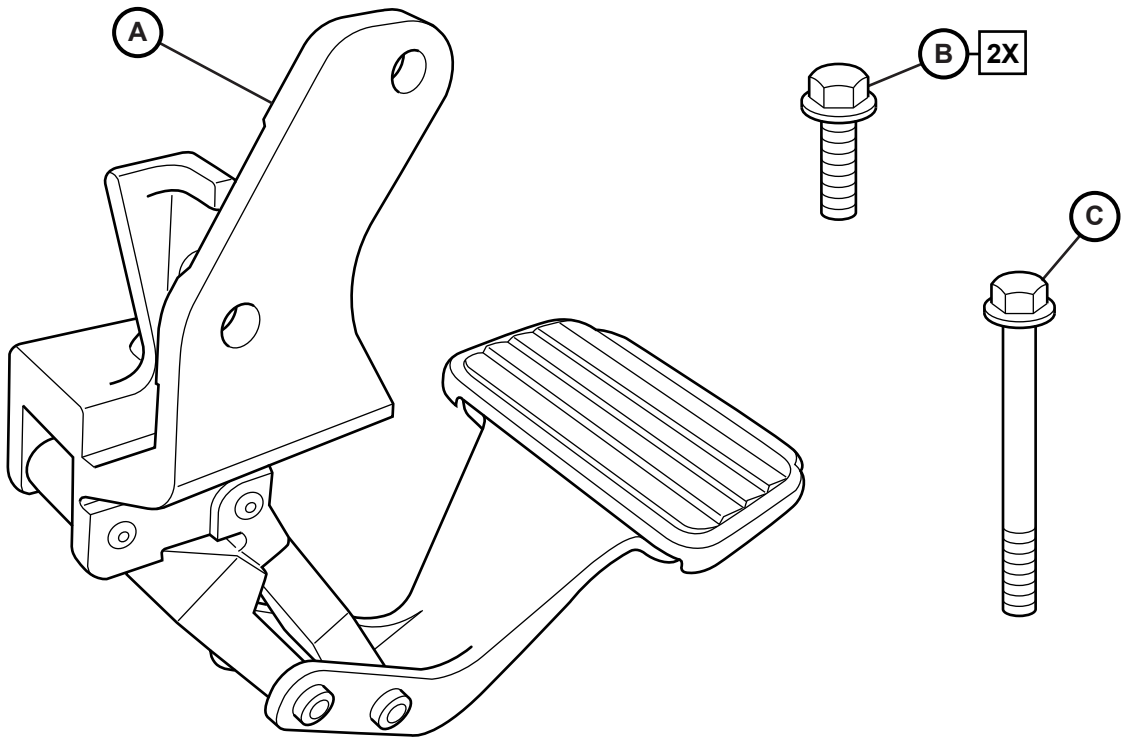


1

2


IMPORTANT: CHECK UNDER VEHICLE.
IF HOLE IS PRESENT, (MY20) PROCEED TO STEP 10
IF HOLE IS NOT PRESENT (MY19 <), PERFORM
STEPS 4 THROUGH 9

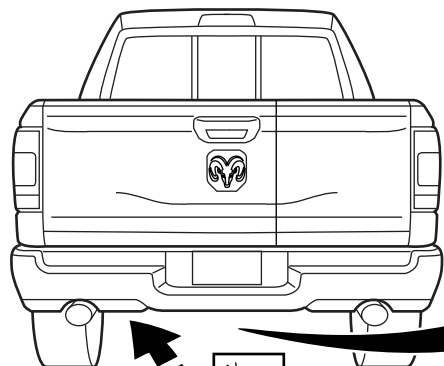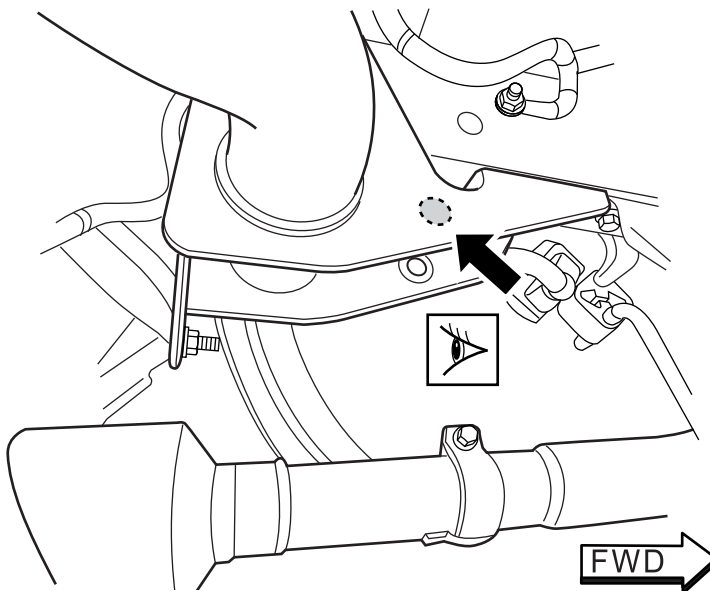**3**

NOTE: MY19 <

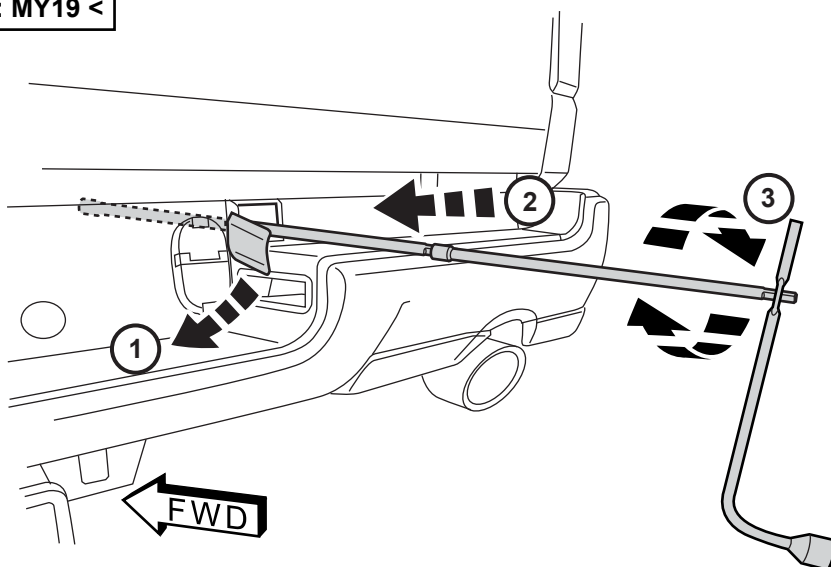


USE TIRE TOOLS IN VEHICLE
TO LOWER SPARE TIRE.
DO NOT FULLY REMOVE.

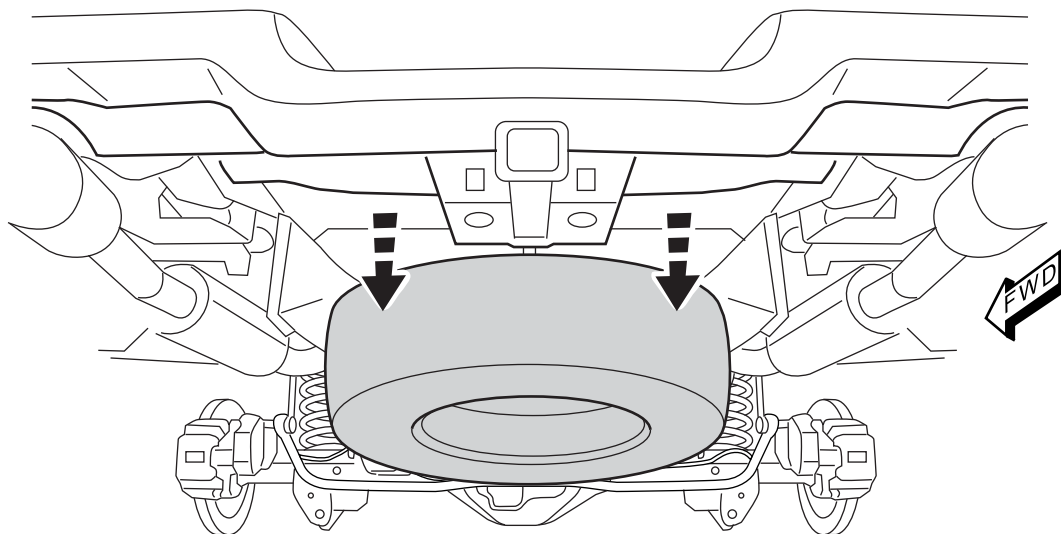
4**5**

TRIM OUT TEMPLATE ON PAGE 5


6

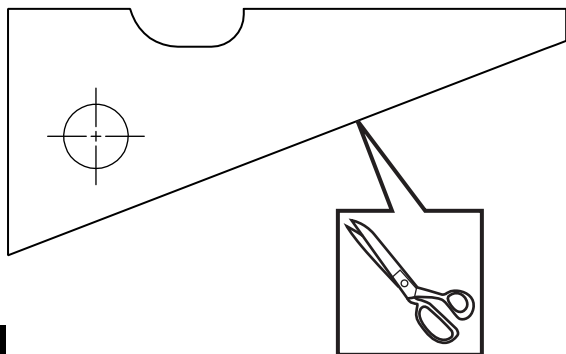


7

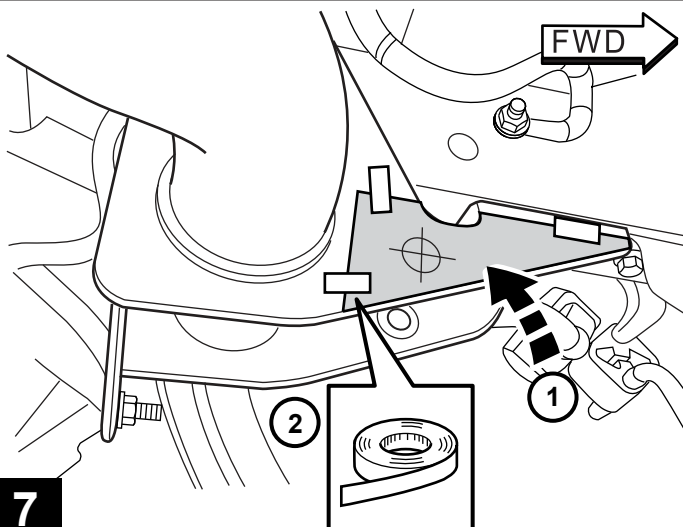


8

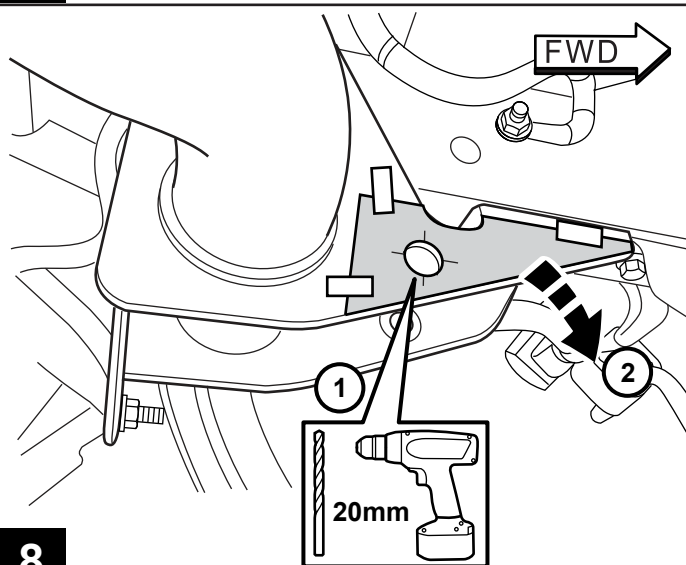


9




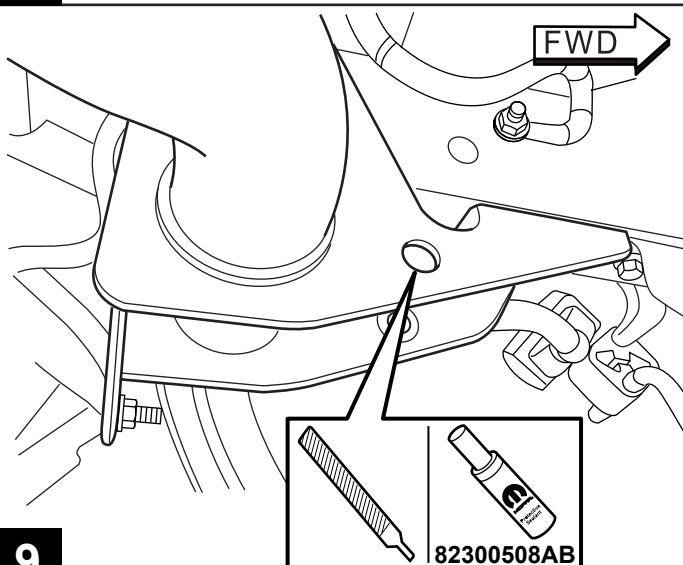


10

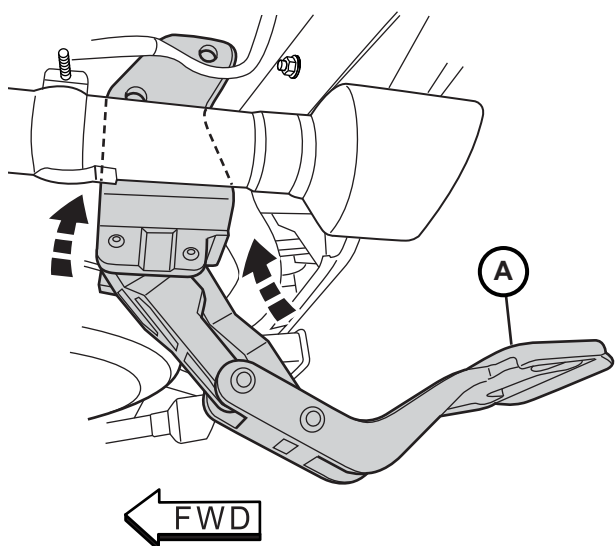

11

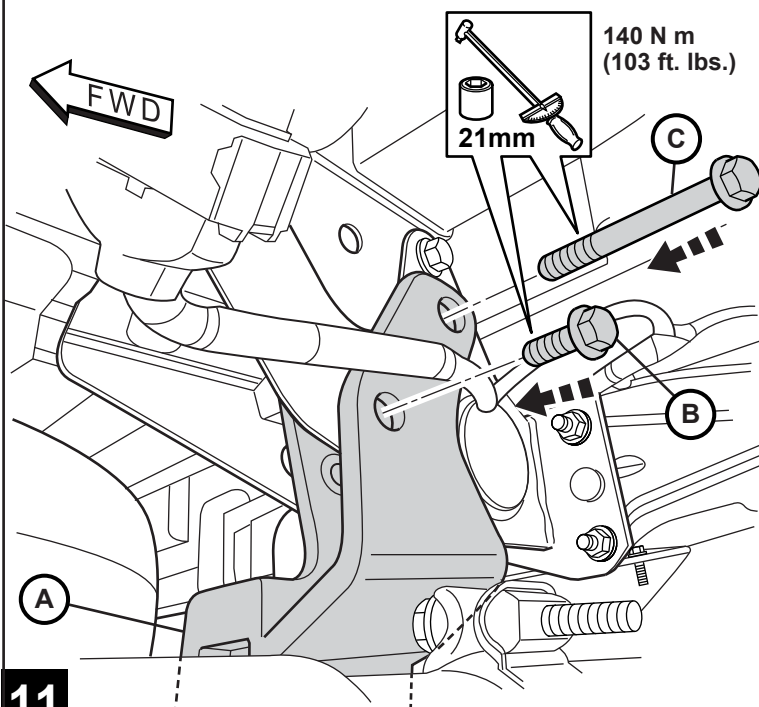

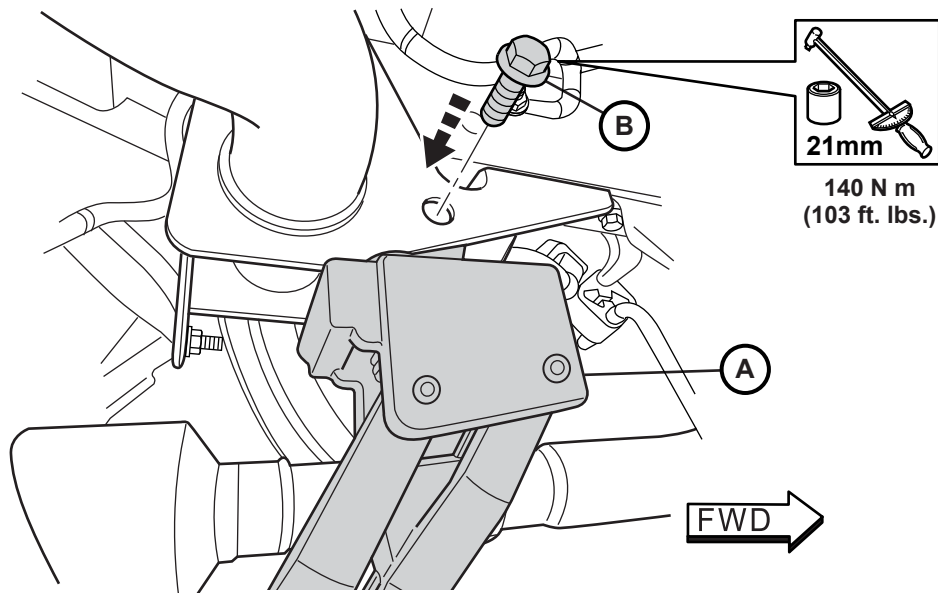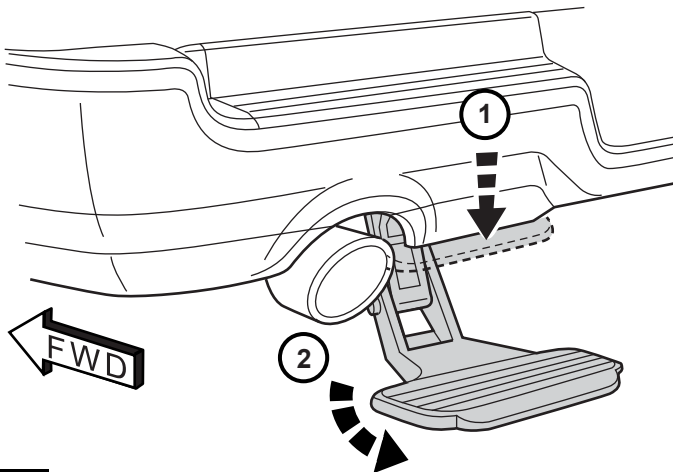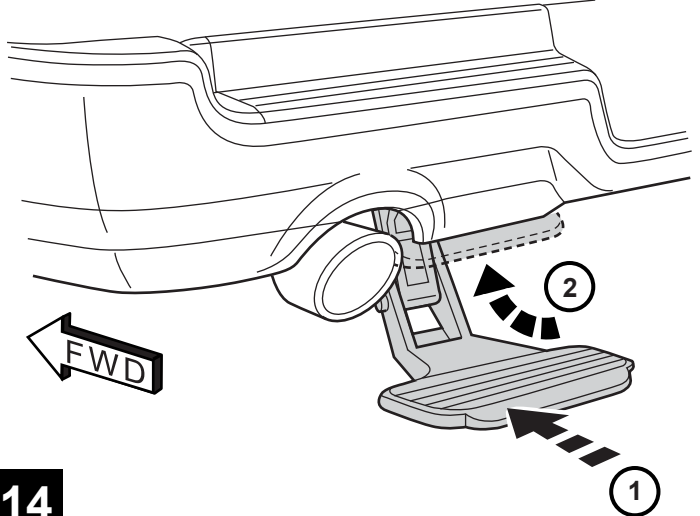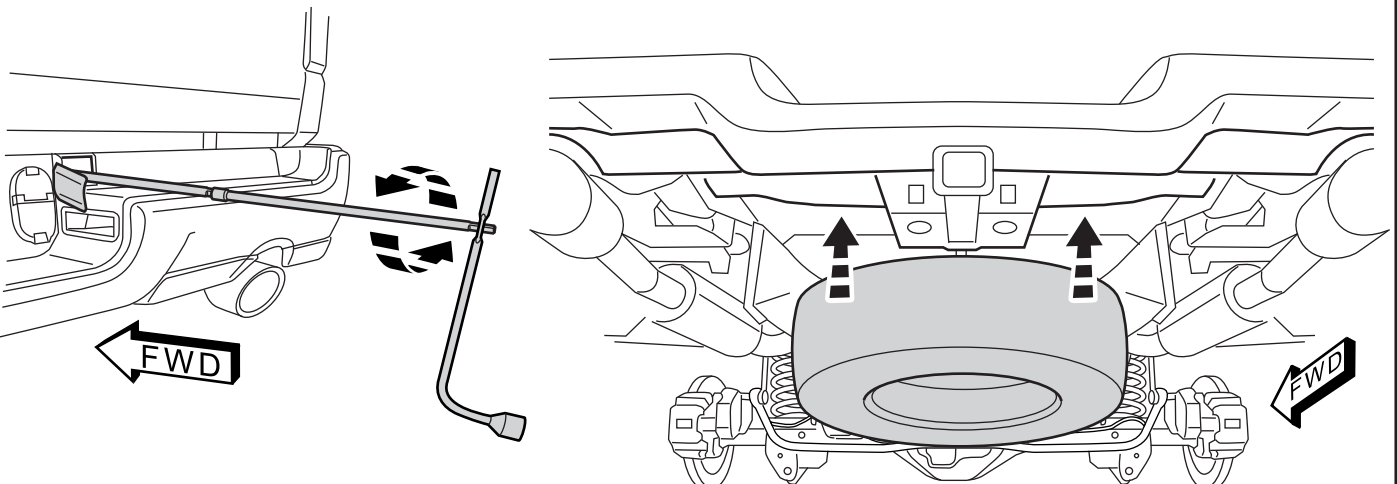**12****13****14****NOTE: MY19 <****15**

TEMPLATE

