



WL Automatic Pedal Cover Kit

www.mopar.com



A




B




C

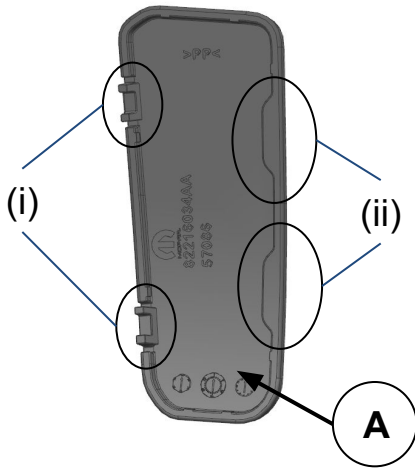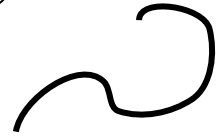

1

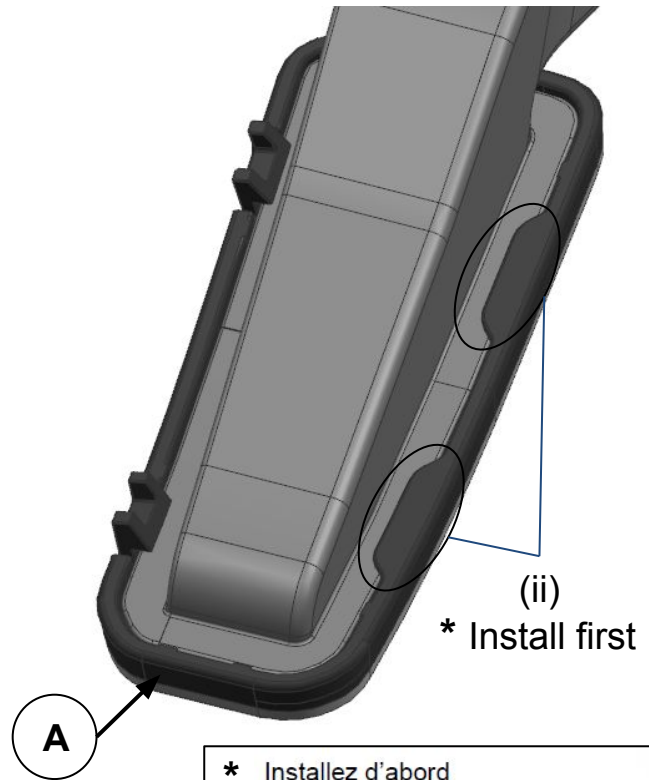

* Install first

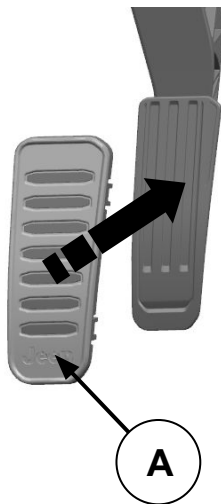

2

* Installez d'abord
 Instalar primero
 Zuerst installieren
 Installare prima
 Θα πρέπει να τοποθετηθεί πρώτα
 Установить в первую очередь
 Önce yerleştirin
 먼저 설치합니다
 Instale primeiro
 首先安装
 التثبيت أولاً
 最初に取りつけるもの

